



**innovair**

**1**

**ON / OFF Button**

This button turns the air conditioner ON and OFF.

**2**

**MODE Button**

Press this button to modify the air conditioner mode in a sequence of following:

→ AUTO → COOL → DRY → HEAT → FAN

**NOTE:** Please do not select HEAT mode if the machine you purchased is cooling only type. Heat mode is not supported by the cooling only appliance.

**3**

**FAN Button**

Used to select the fan speed in four steps:

→ AUTO → LOW → MED → HIGH

**NOTE:** You can not switch the fan speed in AUTO or DRY mode.

**4**

**SLEEP Button**

Active/Disable sleep function. It can maintain the most comfortable temperature and save energy. This function is available on COOL, HEAT or AUTO mode only.


For the detail, see "sleep operation" in "USER'S MANUAL".

**NOTE:** While the unit is running under SLEEP mode, it would be cancelled if MODE, FAN SPEED or ON/OFF button is pressed.


**5**

**TURBO Button**

Active/Disable Turbo function. Turbo function enables the unit to reach the preset temperature at cooling or heating operation in the shortest time (if the indoor unit does not support this function, there is no corresponding operation happened when pressing this button.)

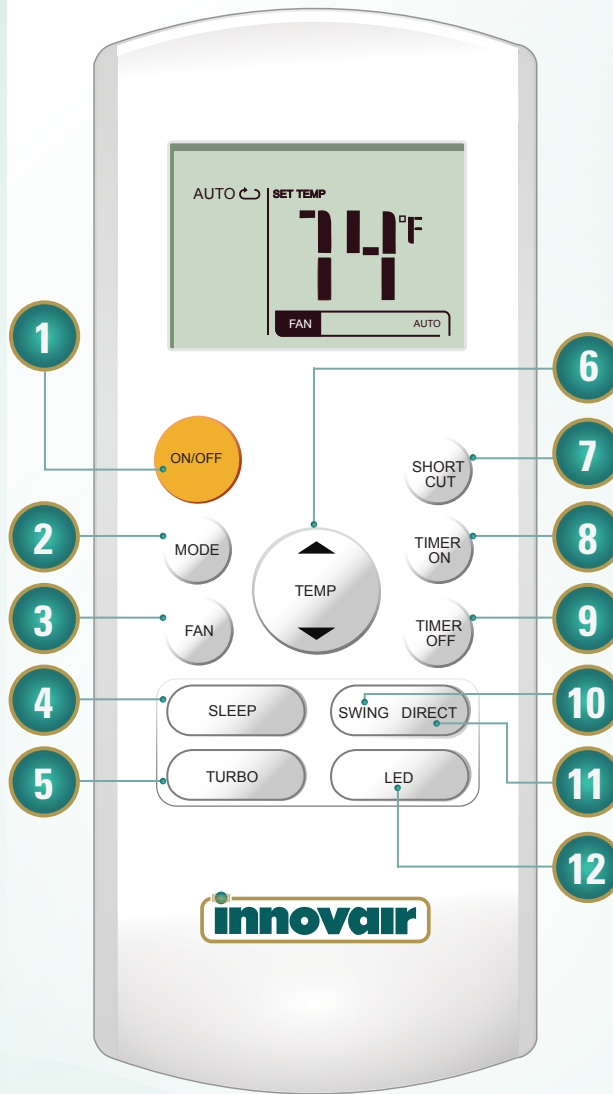

**INDICATORS ON LCD**

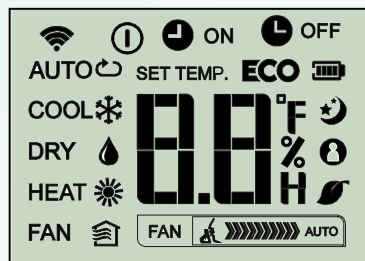

**Modedisplay**

AUTO COOL DRY   
HEAT FAN

- Displayed when data transmitted.
- Displayed when remote controller is ON.
- Battery display(low battery detection)
- ECO** Not available for this unit
- ON Displayed when TIMER ON time is set.
- OFF Displayed when TIMER OFF time is set.
- Show set temperature or room temperature, or time under TIMER setting.
- Displayed in Sleep Mode operation.

**Fan speed indication**

FAN	Low speed
FAN	Medium speed
FAN	High speed
FAN	Auto fan speed

**6**

**UP Button**

Push this button to increase the indoor temperature setting in 1F increments to 86°F.

**DOWN Button**

Push this button to decrease the indoor temperature setting in 1F increments to 62°F.

**NOTE:** Temperature control is not available in Fan mode.

**NOTE:** Press and hold UP and DOWN buttons together for 3 seconds will alternate the temperature display between the °C & °F scale.

**7**

**SHORTCUT Mode**

Used to restore the current settings or resume previous settings.

On the first time connecting to the power, if push the SHORTCUT button, the unit will operate on AUTO mode, 78 F, and fan speed is Auto.

Push this button when remote controller is on, the system will automatically revert back to the previous settings including operating mode, setting temperature, fan speed level and sleep feature(if activated).

If pushing more than 2 seconds, the system will automatically restore the current operation settings including operating mode, setting temperature, fan speed level and sleep feature (if activated).

**8**

**TIMER ON Button**

Press this button to initiate the auto-on time sequence. Each press will increase the auto-timed setting in 30 minutes increments. When the setting time displays 10.0, each press will increase the auto-timed setting 60 minutes increments.

To cancel the auto-timed program, simply adjust the auto-on time to 0.0.

**9**

**TIMER OFF Button**

Press this button to initiate the auto-off time sequence. Each press will increase the auto-timed setting in 30 minutes increments.

When the setting time displays 10.0, each press will increase the auto-timed setting 60 minutes increments. To cancel the auto-timed program, simply adjust the auto-off time to 0.0

**10**

**SWING Button**

Used to stop or start horizontal louver auto swing feature.

**11**

**DIRECT Button**

Used to change the louver movement and set the desired up/down air flow direction.

The louver changes 6° in angle for each press.

**12**

**LED Button**

Disable/Active indoor screen Display. When pushing the button, the indoor screen display is cleared, press it again to light the display.